

Plant Risk Assessment Managing Director Document Number: 01

THIS DOCUMENT IS CONTROLLED - UNCONTROLLED WHEN PRINTED

ID	Description of Hazard Potential		Activity	ivity Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		implemented		measures	score
1	Operator Competency	/					
1.1	Untrained operator, not following proper operating procedures. Distracted operator. Following a poor system of work. Operator working alone.	Crushing Impact Trauma	Set up Operation Maintenance	Operation instructions explained in operator's manual	C4 Extreme	Train operators on safe use of the plant. Operator training should include at least the following: • pre-operation inspections • safe operation of plant • regular maintenance tasks • understanding of plant operation • capabilities and limitations • emergency procedures Do not operate the plant unless proper training has been received. Ensure operator's manual is kept with the plant for reference. Do not operate the plant when distracted, ill, excessively fatigued, or under the influence of drugs or alcohol. Implement appropriate system of work based on manufacturer's recommendations (e.g. operating instructions shown in operator's manual).	B1 Low
1.2	Misuse Unauthorised use of plant	Crushing Impact Trauma	Operation	Operator's manual warns about not using the plant for other than its intended purpose.	C4 Extreme	Do not use the Winlet for any other purpose than its intended use as explained in the operator's manual. Do not operate the plant unless proper training has been received.	B1 Low

Plant Risk Assessment Managing Director

Document Number: 01

2

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

ID	Description	Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		Implemented		measures	score
						Keys are not to remain in an unattended machine.	
2	Plant Limitations						
2.1	Plant overload causing	Roll over Crushing	Driving Operation		C4 Extreme	Learn and understand plant limitations.	A2 Low
	- structural failure					Do not exceed load capacity. Regularly inspect the Winlet as per maintenance schedule to ensure integrity of structural members.	
2.2	Excessive incline causing plant to overturn	Roll over	Driving Operation		C3 High	Do not drive the plant over ground slopes which exceeds its limitations.	B2 Low
						Conduct site risk assessment to determine suitability of job site before starting any work.	
2.3	Excessive wind force causing overturning.	Roll over	Operation	Follow maximum wind speed rating.	C3 High	Constantly monitor wind speed when operating in wind sensitive areas.	B2 Low
2.4	Excessive side load No protection from overload system on	Roll over Crushing	Driving Operation	Maximum side load displayed on rated capacity chart. Operator's manual obligates	C4 Extreme	Make outriggers a standard item for Australian market. Always deploy outriggers when	A2 Low
	side loads.			operators to use outriggers		carrying a side load.	
				when handling loads on the side of the machine		Do not exceed side load capacity.	
				side of the machine.		Do not drive a loaded plant on ground slopes across the longitudinal axes of the plant.	
						Do not use the overload system to measure side load, determine the weight of the load to be transported before lifting it with the plant.	

Plant Risk Assessment Managing Director

Document Number: 01

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

Page:

ID	Description o	f Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		implemented		measures	score
						Do not drive a speed greater than 0.4 m/s with a side load. Do not stand next to the lower side of the plant when driving with a load.	
2.5	Drive acceleration	Crushing Being runover	Driving	Bump stop present on drive control arm. Micro switch on spring-loaded control arm stops drive function when control arm is released as it returns to the upright position.	C3 High	Do not drive at fast speeds. Be aware of other persons near and around the plant. Maintain visual contact with the direction of travel.	B2 Low
3	Plant at worksite	1					
3.1	Collision with - site infrastructure - other plant and/or pedestrians - overhead powerlines	Crushing Impact Electrocution	Set up Operation Driving Transport	Motion audible and visual alarm present.	C3 High	Beware of any obstructions around the work area; survey the area before moving the plant including powerlines. Beware of other plant and persons around the work area, in particular when travelling around corners or blind spots. Use spotter where required.	B2 Low
3.2	Exhaust fume build- up in poorly ventilated areas.	Asphyxiation	Operation	Some models installed secondary power unit – 240V.	C4 Extreme	Use 240V powered option when available. Ensure there is enough ventilation at the job site whenever combustion engine is used to operate the plant. May require forced mechanical ventilation.	B1 Low

Plant Risk Assessment Managing Director Document Number: 01

ID	Description of	Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		Implemented		measures	score
3.3	Load or parts of the crane entangled with fixed objects	Overturning Impact	Set up Operation		C5 Extreme	Plan lift beforehand, determine plant and load flight path before commencing a lift operation.	A2 Low
3.4	Plant positioned near or driven over large depressions / obstacles.	Roll over Collapse	Operation Driving		C4 Extreme	Always maintain a safe distance from ditches, trenches or pit walls while operating plant. Plan a route to safely bring the plant to the job site. Avoid driving over large obstacles or depressions. Assess the ground conditions before setting up the plant: use dunnage under outriggers if necessary. Deploy outriggers with use of duel wheel set-up.	B2 Low
3.5	Pulling/pushing effort	Musculoskeletal injury	Driving Operation		C3 High	Do not attempt to pull or push the plant without using driving controls.	B1 Low
4	Operation						
4.1	Damaged control panel / control panel cable	Crushing Impact	Set up Operation		C5 Extreme	Regularly inspect control panel and cable.	B1 Low
4.2	Driving on steep ground	Overturning Crushing	Driving Set up	Follow maximum inclination limits set by manufacturer. Found in plant manual.	A5 High	Carry out job site risk assessment to determine suitability of the site before commencing any work. Avoid driving on steep ground; find alternative routes whenever possible. Do not stand on the lower side of the plant while driving on steep ground.	A1 Low

Plant Risk Assessment

Managing Director

Document Number: 01

Page:

ID	Description of Hazard Potential		Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		implemented		measures	score
						Never drive across steep ground, always drive with the tracks / tyres parallel to ground inclination. Deploy outriggers when driving	
						across steep surfaces.	
4.3	Operator control	Roll over Impact	Operation	Model comes with option of remote control. Wheeled version comes in 4wd.	C5 Extreme	Operate the drive control levers gently in order to avoid abrupt and jerky movements.	B2 Low
						When driving, pay special attention to stability and the dimensions, especially the length, of the machine.	
4.4	Incorrect replacement tyre fitted	Crushing Overturning Impacting	Operation	Maintain correct tyre inflation pressures as per manufacturers recommendation.	B4 High	Ensure replacement tyres match the plant manufacturer specifications.	A1 Low
4.5	Flat tyre	Overturning Crushing Impact	Operation	Prestart inspection as per manufacturers recommendation.	C4 Extreme	Regularly check condition of pneumatic tyres. Avoid driving over sharp obstacles or debris.	B1 Low
4.6	Overturning due to missing counterweights	Crushing Impact Cutting	Operation		C4 Extreme	Regularly check all counterweights are present. Machine manual will indicate correct number for each unit.	B1 Low
4.7	Uncontrolled movement of plant components	Crushing Impact Shearing	Set up Operation Maintenance Cleaning Troubleshoot	Prestart inspection as per manufacturers recommendation. All override valves should be returned, and lead seal installed.	C3 High	Follow manufacturer's instructions for attachment/removal of fly jib and other items of plant. Isolate power to plant and remove the main switch key when performing maintenance and cleaning tasks.	B2 Low

Plant Risk Assessment

Document Number: 01

6

Managing Director

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

ID	Description o	f Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence	_	implemented		measures	score
						Install safety barriers around the working area to prevent unauthorised access.	
						Maintain a safe distance from moving parts of the plant.	
						Stay clear of components which may swing or drop unexpectedly.	
						Maintenance to be carried out by a competent person.	
						Pay attention to crush and shear hazard decals to machine.	
4.8	Inadvertent operation of	Crushing Impact	Set up Operation	Deadman circuit installed by manufacturer.	C5 Extreme	Ensure deadman operation during prestart.	B2 Low
	controls		Maintenance Emergency			Always depress the emergency stop button whenever the plant is not being operated.	
						Always double check function selection in control panel before operating a function.	
4.9	Falling objects / materials	Impact Severing	Operation		C3 High	Do not stand directly under material being lifted.	B2 Low
		Cutting				Barricade work area under fall zone to create a no-go zone.	
4.10	Raising boom	Crush between fixed structure and basket	Set up Operation Maintenance Troubleshoot	Check surroundings prior to starting and continually throughout job.	C4 Extreme	Be aware of potential crush hazards in the direction of movement before moving the work platform.	B2 Low
						Hard hat may be required if working near overhead obstructions.	
						Add crush hazard decal to plant.	

Plant Risk Assessment Managing Director

Document Number: 01

Revision: 01 Date: 01 Dec. 2023 Page:

7

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

ID	Description of	f Hazard Potential	Activity Risk control measures already	Risk	Supplementary risk control	Risk	
	Origin	Consequence	-	implemented		measures	score
						Ensure all persons are clear of moving components before performing a movement. Maintenance to be carried out by a competent person.	
4.11	Faulty/out of order, or poorly maintained plant	Crushing Impact Trauma	Operation Emergency Maintenance	Operator's manual outlines plant maintenance schedule. Current maintenance inspections up to date as per manufacturers recommendation.	B4 High	Always perform pre-operation inspection before operating the plant. Implement 'tag out' procedure to isolate faulty/out of order plants. Do not use an 'out of order' plant. Record all faults in logbook. Perform plant maintenance as per manufacturer's maintenance schedule. Keep maintenance records / plant logbook up to date.	B1 Low
4.12	Plant modifications after completion of risk assessment.	Crushing Overturning	Operation Set up		C5 Extreme	Ensure modifications made to the plant are inspected, assessed, and approved by a competent person. Review hazard analysis and risk assessment after plant modifications.	B1 Low
5	Transport						
5.1	Loading and unloading – driving on	Roll over Crushing	Transport	Use remote controls always as they provide a safe operating distance for loading / unloading. Use low speed / low engine RPM on slopes / ramps.	C4 Extreme	Follow appropriate loading procedures including using weight rated ramps, have ramps at a low inclination, all person clear from the loading zone and placing the heavy end towards the front of the tray or tow hitch on a trailer.	B2 Low

Plant Risk Assessment Managing Director

Document Number: 01

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

ID	Description of	Hazard Potential	Activity Risk control measures already	Risk	Supplementary risk control	Risk	
	Origin	Consequence	-	implemented		measures	score
5.2	Loading and unloading – lifting on	Crush Impact	Transport Lifting	Lifting procedure included in Operator's Manual.	C5 Extreme	Follow appropriate lifting procedure. Lifting kit is available for purchase. Remove counterweights from the plant before lifting and transporting.	B2 Low
5.3	Failure of lifting slings / chains used for lifting or tying down / tie down straps	Roll over Crushing	Transport Lifting	Plant is fitted with designated lifting and tied down points.	C5 Extreme	Use tie-down points provided on the plant to secure it for transportation. Ensure lifting slings and tie down straps are in good condition. Ensure lifting slings have a SWL suited to the load.	B2 Low
5.4	Unmarked lifting and tiedown points	Crushing	Transport Lifting	Lifting and tie-down points are provided.	B5 Extreme	Mark lifting and tie-down points on plant for correct identification.	B2 Low
6	Plant Failure						
6.1	 Plant failure including: malfunction of control devices structural failure of machine components failure of lift / tie down points steering mechanism runaway plant 	Crushing Impact	Storage Operation Setup	Follow routine maintenance inspections by qualified person as per manufacturers recommendation. Use designated tie down points. Prestart inspection as per manufacturers recommendation.	B5 Extreme	Carry out pre-operational function tests of safety related functions at the start of every shift. Beware of risks associated with inadvertent operation of the machine, avoid compromising machine positions. Familiarise with location of emergency stop buttons. Regularly inspect the Winlet as per maintenance schedule to ensure integrity of structural members. Regularly inspect steering mechanism. Drive system fitted with	B2 Low

Plant Risk Assessment Managing Director Document Number: 01

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

 Revision:
 01

 Date:
 01 Dec. 2023

 Page:

ID	Description of	Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		Implemented		measures	score
						negative brakes which automatically engage when power is removed.	
6.2	Burst hydraulic hose	Crushing Overturning Burn Skin irritation	Set up Operation Maintenance	Counter-balance valves fitted on lift and extension cylinders.	A3 Medium	Check hydraulic hose condition during periodic maintenance. Report and "tag out of service" if identified.	A2 Low
6.3	Excessive hydraulic oil pressure.	Impact Crushing	Set up Operation	Plant fitted with pressure relief valve.	C3 High	Check pressure settings during preventative maintenance.	A1 Low
6.4	Emergency Stop not available	Crushing Impact Trauma	Emergency Maintenance		C4 Extreme	Install emergency stop.	A1 Low
6.5	Inadequate maintenance procedures	Crushing Impact	Maintenance	Maintenance procedures included in Operator's Manual.	B4 High	Allow only qualified service personnel to perform maintenance tasks.	B1 Low
7	Electrical						
7.1	Damaged power cables, components.	Electrocution Shock Fire	Set up Operation Maintenance Troubleshoot Emergency	RCD fitted to 240V circuit. Fuse protection on electrical circuits	C1 Low	Ensure plant and extension cord are electrically tested and tagged as per AS 3760. Do not operate/use equipment with an expired test tag. Ensure inline RCD is used when charging the batteries. Visually inspect the plant and extension lead before resetting the thermal fuse and RCD.	B1 Low
7.2	Earthing fault	Electrocution Shock Fire	Set up Operation Maintenance	RCD fitted to machine 240V circuit.	C4 Extreme	Use appropriate means to supply power to the plant. That is, use extension leads with neutral, live and earth wire and pin.	A2 Low

Plant Risk Assessment Managing Director

Document Number: 01

ID	Description o	f Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		implemented		measures	score
						Ensure the plant's appliance inlet is regularly tested and tagged as per AS 3760.	
						Do not operate a plant with an expired electrical safety tag.	
						Visually inspect the plant and extension lead before turning the power ON.	
7.3	Power extension lead overheating.	Electrocution Shock Fire	Set up Operation Maintenance Troubleshoot		C4 Extreme	Use appropriate means to supply power to the plant. That is, only use extension leads rated to plant requirements.	A3 Medium
			Emergency			Ensure the plant's appliance inlet is regularly tested and tagged as per AS 3760.	
						Do not operate a plant with an expired electrical safety tag.	
7.4	Contact with live conductors under	Shock Electrocution	Emergency Maintenance		C5 Extreme	Do not touch terminals/wires inside the electric cabinet.	A2 Low
	plant cover					Keep electric cabinet closed and locked at all times.	
7.5	Power failure (flat battery)	Crushing Being runover	Operation Emergency	Hydraulic valve bank over centre type when power is removed.	C4 Extreme	Prepare emergency procedure for power failure.	C1 Low
				Drive system brake is applied when power is removed.			
7.6	Battery charging	Burn Fire Explosion	Maintenance		C5 Extreme	Charge in an area with good ventilation, away from ignition sources.	A3 Medium
7.7	Battery handling	Burn Fire	Maintenance	Isolate power by turning off factory isolator.	C5 Extreme	When handling the battery, wear protective clothing and eyewear.	3B Low

Plant Risk Assessment Managing Director Document Number: 01

 Revision:
 01

 Date:
 01 Dec. 2023

 Page:

© Monitor 2023

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

ID	Description of	Hazard Potential	Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence	-	implemented		measures	score
		Explosion				Avoid contact with clothes or skin; if electrolyte gets on your skin or clothes, flush it with a large quantity of water.	
						In case of contact with eyes, flush with a lot of water for at least 15 minutes and seek medical assistance immediately.	
						Do not touch the battery terminals or cables with tools that may cause spark emissions.	
						In order to avoid spark emissions, always disconnect the (-) cable first and connect it last.	
						Use appropriate lifting techniques, perform 2 person lifting technique for heavy or awkward to reach parts.	
7.8	Lightning	Electrocution	Set up		A5	Do not use the plant during a	A1
		Shock	Operation		High	thunderstorm.	Low
8	Lifting Components						
8.1	Incompatible panel surface with suction head	Crushing Impact	Operation		C4 Extreme	Do not use the plant to lift panels with porous surfaces, or incompatible with the suction head. Add decal to plant, visible from	B1 Low
						operator position, indicating the nature of loads which can be handled by the equipment.	
8.2	Slippery suction contact surface	Cushing Impact	Operation	Operator's manual states contact surfaces to be dry and clean.	C4 Extreme	Ensure material to be lifted is dry and clean to prevent it from slipping off the suction cups.	A1 Low

Plant Risk Assessment Managing Director

Document Number: 01

ID	Description of Hazard Potential		Activity Risk control measures already		Risk	Supplementary risk control	Risk
	Origin	Consequence		Implemented		measures	score
8.3	Repositioning of suction head units.	Impact Severing	Set up		C2 Medium	Ensure operators are using hand protection.	A1 Low
8.4	Use of non-positive lifting device (vacuum system)	Crushing Impact Cutting	Operation Driving	Secondary (redundant) vacuum circuit and loss of vacuum alarm present.	B4 High	Regularly test vacuum system	A2 Low
8.5	Vacuum pads unsuitable for the type of load being handled	Crushing Cutting Impact	Operation		C4 Extreme	Ensure material is non-porous, able to maintain vacuum seal, and dimensioned in such a way that its centre of gravity is within the area of suction caps. Add decal to plant indicating the nature of loads which can be handled by the vacuum head. Implement 'tag out' procedure to isolate faulty/out of order plants.	A2 Low
8.6	Loss of vacuum: Damaged suction cups Pump failure Vacuum Leak	Crushing Cutting Impact	Operation Driving	Plant fitted with redundant vacuum circuit. Audible alarm alerts operator when vacuum level drops below 60%.	C4 Extreme	Test vacuum system regularly. Safely lower load into a safe position if loss of vacuum occurs. Monitor vacuum system via gauges provided. Maintain a safe distance from the load being handled. Implement 'tag out' procedure to isolate faulty/out of order plants.	A2 low
8.7	Boom / hydraulic system maintenance and repairs	Crushing	Maintenance		C4 Extreme	Ensure boom is properly supported before carrying out any maintenance tasks to boom / boom mechanism.	B1 Low
8.8	Faulty/out of calibration load moment indicator	Crushing Impact Overturning	Operation		B5 Extreme	Perform periodic testing and calibration of load moment indicator as per manufacturer's recommendations and/or	B1 Low

Plant Risk Assessment Managing Director Document Number: 01

ID	Description of Hazard Potential		Activity	Risk control measures already	Risk	Supplementary risk control	Risk
	Origin	Consequence		Implemented		measures	score
						local authority requirements.	
8.9	Removal / installation of counterweights	Musculoskeletal disorders	Set up Transport		C3 High	Take care when handling counterweights, do not lift multiple weights simultaneously to reduce the risk of back injury and muscle strain.	A2 Low
8.10	Tilt head movement	Shearing Crushing	Operation		C5 Extreme	Add shear hazard decal to both sides of tilt arm on half-moon plate with holes. Ensure all persons are clear of moving components before performing a movement.	B1 Low

Plant Risk Assessment Managing Director Document Number: 01

THIS DOCUMENT IS CONTROLLED – UNCONTROLLED WHEN PRINTED

RISK MATRIX							ACTION	HEIRACHY OF CONTROLS
		CONSEQUENCE					EXTREME – Do not proceed,	1. Elimination – controlling the hazard at
		1. Insignificant	2. Minor	3. Moderate	4. Major	5. Catastrophic	are implemented to lower the	 Substitution – e.g. replacing one substance or activity with a loss
ПКЕЦНООД	E. Almost Certain Is expected to occur immediately or within a short timeframe	HIGH	HIGH	EXTREME	EXTREME	EXTREME	risk. Senior management attention required. HIGH – Review and introduce	 hazardous one 3. Isolation – e.g. use of barriers to shield or isolate the hazard, enclosures for noisy
	D. Likely Will probably occur in most circumstances	MEDIUM	HIGH	HIGH	EXTREME	EXTREME	additional controls to lower level of risk. Needs senior management attention.	machinery, installing guards on machinery 4. Engineering – e.g. design and install
	C. Possible Could happen and has occurred here or elsewhere	LOW	MEDIUM	HIGH	EXTREME	EXTREME	 MEDIUM – Monitor and maintain supervision and controls. Specify management responsibility. LOW – Monitor and manage by routine procedures and monitoring. Administration – policies ar for safe work practices Personal Protective Equipm respirators, ear plugs, face glasses, safety shoes 	 equipment to counteract the hazard 5. Administration – policies and procedures for safe work practices
	B. Unlikely Unlikely to occur	LOW	LOW	MEDIUM	HIGH	EXTREME		 Personal Protective Equipment – e.g. respirators, ear plugs, face masks, safety glasses safety shoes
	A. Rare Not expected to occur	LOW	LOW	MEDIUM	HIGH	HIGH		5,0000, 00,000 0000

CONSEQUENCE DESCRIPTORS								
SEVERITY	SAFETY	ENVIRONMENT	BUSINESS					
5. Catastrophic	Potential for incident resulting in serious damage	The aspect is legally or contract regulated and has the potential for a	Loss > \$1M					
	and/or fatality	disastrous long term impact resulting in prosecution.						
4. Major	Potential for incident resulting in serious damage	The aspect is legally or contract regulated and has the potential for a	Loss of service provision					
	and/or permanent disabling illness or injury	serious long term impact resulting in prosecution.						
3. Moderate	Potential for incident resulting in significant	Significant environmental aspect with short term impact resulting in	Loss \$100K - \$1M					
	damage and/or temporary disabling illness or	improvement notice.						
	injury							
2. Minor	Potential for incident resulting in moderate	The aspect is legally or contract regulated and has the potential for a	Prolonged reduction in service					
	damage and/or requiring medical treatment.	moderate reversible short term impact resulting in an improvement	provision or productivity					
		notice.						
1. Insignificant	Potential for incident resulting in minor damage	The aspect is not legally or contract regulated and has the potential	Loss \$10K - \$100K					
	and/or injury requiring first aid treatment	for a minor negligible impact.						

Plant Risk Assessment Managing Director

Document Number: 01

15

© Monitor 2023